

Scotsman®

Basic Ice Machine Cleaning and Sanitizing Procedures*

Models: CME256, CME506, CME656, CME806


1. Remove all ice from the bin.

2. Remove the front panel.

3. Push and release the Harvest button.

4. Wait for the machine to finish the Harvest cycle and stop.

5. Remove the evaporator cover.

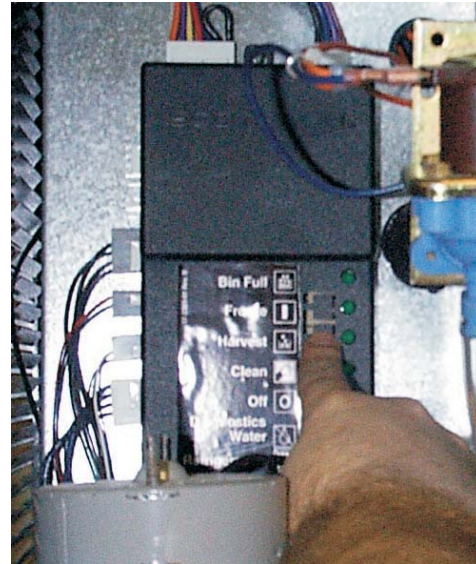

Step 3: Push and Release the Harvest Button



Step 5: Remove Evaporator Cover

6. Push and release the Clean button. The Clean indicator light will be blinking, and the pump will restart.



Step 6: Push and Release the Clean Button

7. Pour 12 ounces of Scotsman Ice Machine Cleaner into the reservoir water. Return the evaporator cover to its normal position.



Step 7: Pour Ice Machine Cleaner Into the Reservoir

* Other components will require periodic cleaning and sanitizing. The complete procedure is available on the machine or in its manual.

8. Wait 10 minutes while the cleaning solution circulates.

9. Push and release the Clean button again. This starts the rinsing process. The Clean indicator light will be ON. Note: The rinse process flushes any residual cleaner out of the ice machine's water system.

10. Wait 20 minutes for the rinsing process to remove any residual cleaning solution.

11. Push the off button to switch the machine off.

12. Go to the next step to sanitize the machine or go to step 21 to finish the cleaning process.

13. Mix 2 gallons of Sanitizer solution. Follow local codes and sanitizer instructions.

Note: Some sanitizers must be rinsed off and some must air dry.



Step 9: Push and Release the Clean Button



Step 11: Push and Release the Off Button

14. Push and release the Clean button.

15. Pour 16 ounces of Sanitizer solution into the reservoir water.

16. Wait 10 minutes while the sanitizing solution circulates.

17. Push and release the Clean button again. This starts the rinse process. Sanitize the ice storage bin while waiting.

18. Wait 20 minutes for the rinsing process to remove any residual sanitizer.

19. Push the off button to switch the machine off.

20. Remove the evaporator cover and spray or wash all interior surfaces of the freezing compartment including the evaporator cover with sanitizer solution.

21. Return the evaporator cover to its original position. Push and release the Freeze button.

22. Return the front panel to its normal position and secure it to the machine with the original screws.



Step 14: Push and Release the Clean Button

Use the balance of the sanitizing solution to sanitize the interior of the ice storage bin.



Step 21: Push and Release the Freeze Button